

GH[™] 833 Sprayers

311484L EN



IMPORTANT SAFETY INSTRUCTIONS

Read all warnings and instructions in this manual and related manuals. Be familiar with the controls and the proper usage of the equipment. Save these instructions.

Models: 249318, 249617, 253471, 253472, 16U287, 16U288, 16V258, 16V260

Maximum Working Pressure 4000 psi (27.6 MPa, 276 bar)

Related Manuals






311283

311279




311485

311254

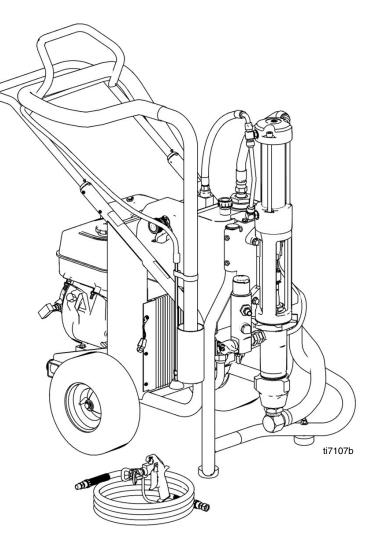


Parts - Frame

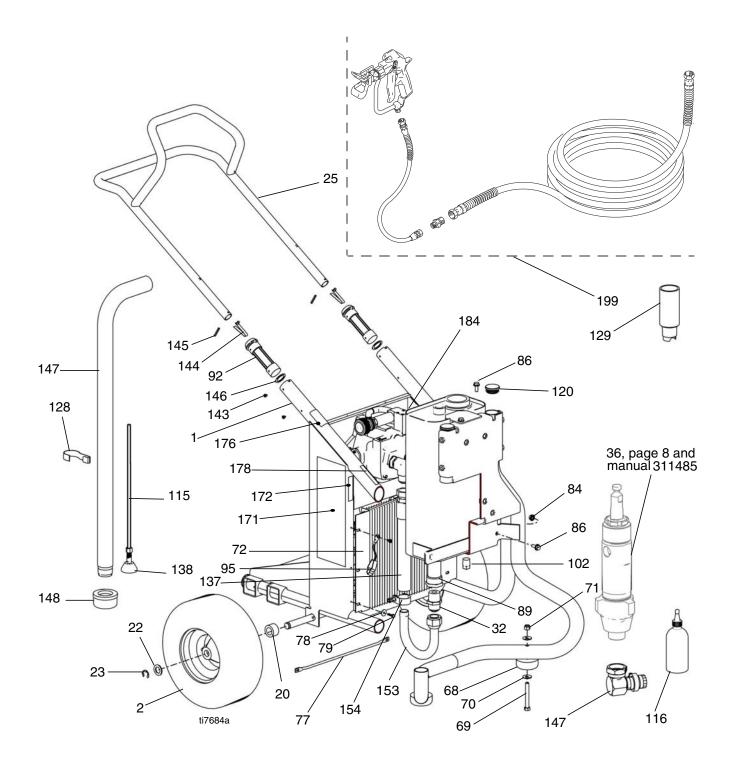

Parts List - Frame

			Qty				Qty
Ref.	Part	Description		Ref.	Part	Description	
1	15G839	•	1	137	15G813	HOSE, coupled	1
2	119509		2	138	241920	DEFLECTOR, threaded	1
20	15G547		2	143	109032	SCREW, mach, pnh	4
22	154628	WASHER	2 2 2	144	112827		2
23	120211	RING, retaining, e-ring	2	145	108068	PIN, spring straight	2
25	287797	KIT, handle, includes 92, 143,	1	146	116891	WASHER	2
		144, 145, 146		147		KIT, suction hose, includes 148	1
32	120068	FITTING, hydraulic	1	147a	287916	,	1
68	801504	FOOT, rubber	2	147b	287915		1
69	100454	SCREW, cap hex hd	2	147c	287936		1
70	100132	WASHER, flat	4	148	237840		1
71	101566	NUT, lock	2	153		TUBE, J suction	1
72	287925	COOLER, oil	1			CLAMP, hose	1
77	15H480		1	171	15G879	, ,	2
78	120339	WASHER, fender	4	166	222385		1
79	C20474	SCREW, self taping	6			LABEL, lift here	2
84	110996	NUT, hex, flanged	2		194317		1
86	110963		4	▲ 184	15F146		1
89	120137	FILTER, suction	1	199	007050	KIT, gun and hose	1
92	15G797		2		287850		1
95	237686	WIRE, ground assembly w/clam	1		287851	flex, optional	1
102	124489	PLUG, pipe	1	199c	287852	texture, hd, optional	I
115	245440	KIT, hose drain, includes 138	1	A Dor	looomont l	Dangar and Warning labels, tage, and	aarda
116	206994	TSL, 8-oz	1	•	available a	Danger and Warning labels, tags, and o t no cost	carus
120	120314	PLUG, tube	2	ale	avallable a		
128	198542	CLIP, spring	1	Avail	able with m	odels 249617 and 253472 only.	
129	287796	KIT, suction tube, includes 148	1			ý	


Parts - Engine and Hoses

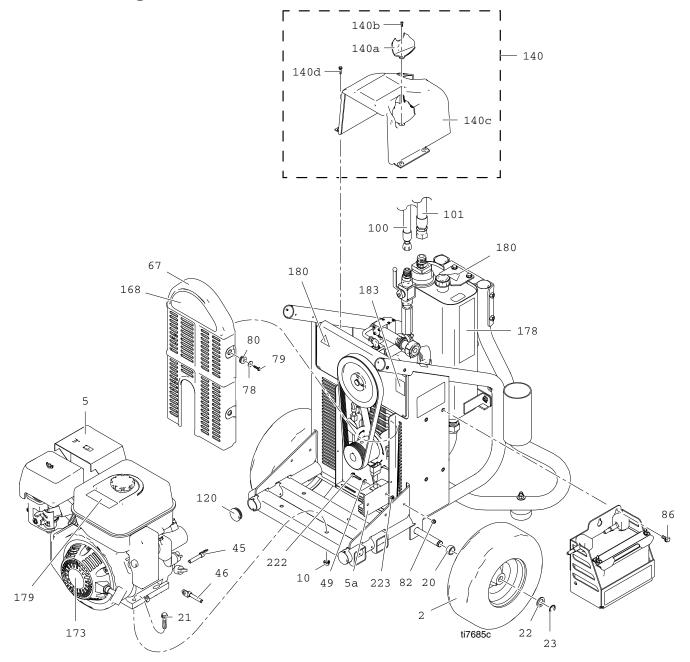

Parts List - Engine and Hoses

			Qty				Qty
Ref.	Part	Description		Ref.	Part	Description	•
2	119509	WHEEL, pneumatic	2	101	15G783	HOSE, coupled	1
		ENGINE, gas, 13 hp, Honda	1	120	120314	PLUG, tube	4
•		ENGINE, gas, 13 hp, Honda,	1	140	288098		1
		electric start		140a		COVER, pump, knob	1
/ 5a		VOLTAGE REGULATOR	1	140b		SCREW, hi/lo, phlps, pwhd	1
		(see Honda manual)		140c		COVER, hydr pump	1
10	112958	ŇUT	1	140d	450070	SCREW, self tapping	4
20	15G547	SPACER, axle	2	168		, ,	1
21	116780	SCREW, hex hd, flanged	4	+171		LABEL, side, top, GH833	1
22	154628	WASHER	2	173	15G907	LABEL, Honda GX390 13 hp LABEL, warning, EN/FR/ES	
23		RING, retaining, e-ring	2		194126		1
<i>†</i> 45		CABLE, electric, neg	1		189285		1
<i>†</i> 46		CABLE, electric, positive	1		198492		1
<i>†</i> 49	110755	WASHER	2	†222	120444	SCREW	2
67	288099	KIT, cover, pulley fan, includes 78,	1	•		NUT	2
70	400000	79,80	4	,====			-
78		WASHER, fender	4	🔺 Re	placement	Danger and Warning labels, tags, and	l cards
80 400	120415		4 2		•	at no cost.	
/ 82 / 86		WASHER, lock SCREW, cap, flange head	12				(000
100	15G781		12			lels 16U287, 16U288, 16V258, 16V	260
100	130/01		1	on	IY.		




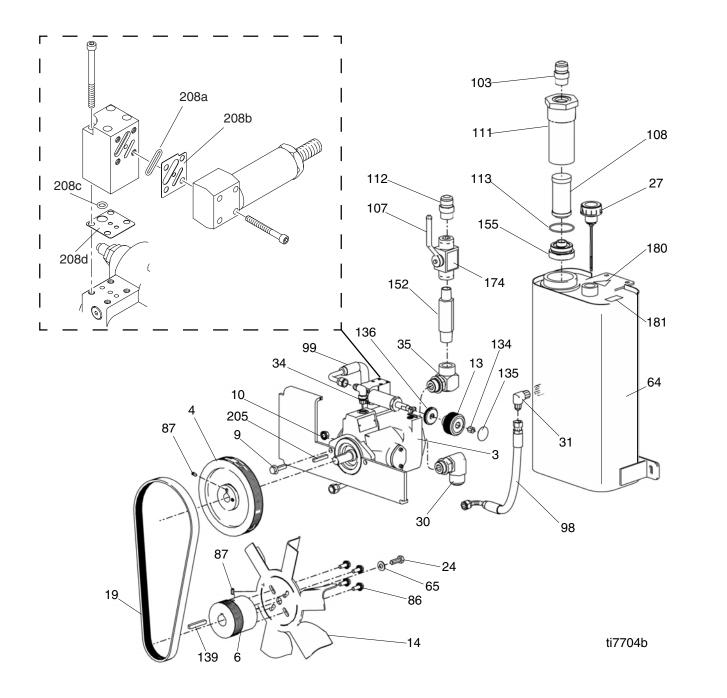

Parts List - Engine, Hydraulic Pump & Reservoir

			Qty				Qty
Ref.	Part	Description		Ref.	Part	Description	-
3	288105	KIT, pump, hydraulic, includes 9,	1	108	287871	KIT, hydraulic oil filter, includes 113	1
		10, 13, 134, 135, 136		111		HOUSING, filter	1
4	15G812	PULLEY, pump	1	112		FITTING, nipple	1
6	15G811	PULLEY, drive, engine	1	113	120315		
9	111193	SCREW, cap, flang hd	2	134	117560		1
10	112958	NUT, hex, flanged	2	135		LABEL, control	1
13	15B438	KNOB, pressure	1	136		COLLAR, locking, pressure knob	1
14	119971	FAN	1	139		KEY, engine pulley	1
19	120172	BELT, poly-V	11	152		FITTING, ball valve	1
24		SCREW, cap, hex, hd	1	155	15H247	, U	1
27		CAP, breather/fill	1	174		LABEL, hdry lever ON/OFF	1
30		FITTING, elbow, hydraulic	1		189285	,	- 1
31		FITTING, elbow, hydraulic	1	181	198585		- 1
34		FITTING, elbow, hydraulic	1	205 208	183401 287100		I
35		FITTING, elbow, hydraulic	1	200	207100	208a, 208b, 208c, 208d)	
64		RESERVOIR, painted	1	208a		O-RING, oval	-1
65	100731	WASHER	1	200a 208b		GASKET, comp/block	1
86		SCREW, cap, flng hd	4	208b 208c		O-RING	1
87	100002		3	208d		GASKET, block/cover	
98		HOSE, coupled	1	2000			
99 103		HOSE, coupled FITTING,	1	▲ Re	nlacement	Danger and Warning labels, tags, and c	ards
103	120063 120140		1		e available		000
107	120140	VALVE, ball	I	arc			


Parts - Pump Stackup & Hydraulic Motor

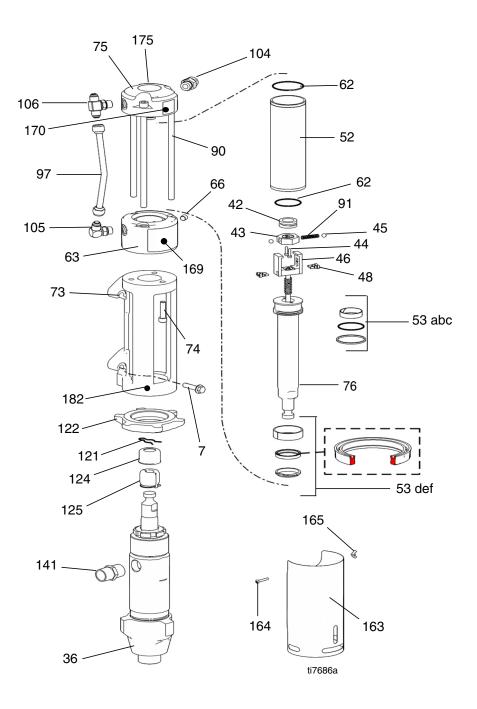

Parts List - Pump Stackup & Hydraulic Motor

			Qty				Qty
Ref.	Part	Description		Ref.	Part	Description	•
7*	120226	-	4	76*	287868	PISTON, hydraulic	1
36	287834		1	90*	120138	SCREW, cap, socket head	3
		141		91	120146		1
		Manual 311485		97	287841	TUBE	1
42	15G501		1	104*		FITTING, hydraulic	1
43		STOP, valve, hydraulic motor	1	105*	117607		1
44		SCREW, cap, sch	2	106*		FITTING, tee, branch, str thd	1
45	101947		2	121*	116407		1
46	15G270	YOKE, arm, hydraulic motor	2	122		NUT, retaining	1
48	105270	SCREW, shoulder, sch	4	124		COVER, coupler	1
52*	287869	CYLINDER, hydraulic motor	1	125*	244819		1
53	287870	KIT, repair, packing, hydraulic,	1	141		FITTING, nipple, 1 in. npt,	1
		includes 62		169▲ 170▲*		LABEL, front LABEL, Graco logo	1
53a		BEARING, piston				LABEL, included with 75	1
53b		O-RING, piston		163‡		SHIELD, pump	1
53c		SEAL, piston, hydraulic motor		164‡	111235		1
53d*		SEAL, rod		165‡	120317		1
53e*		BEARING, rod			192840	LABEL, warning	1
53f*		WIPER, rod	•			,	
62*	116084		2	🔺 Ret	placement	Danger and Warning labels, tags, and	cards
63* 60*	15G559				available a		
66* 73*	101970		1				
73 74*	120202	ADAPTER, hydraulic motor/pump SCREW, cap sch	1 3	‡ Use d	on models 2	253471, 253472, 16V258, and 16V26	0 only.
75	288061	CAP, hydraulic head, includes 175	1	* Incluc	led in Hydr	aulic Motor Kit 24Y566	


Parts - Filter

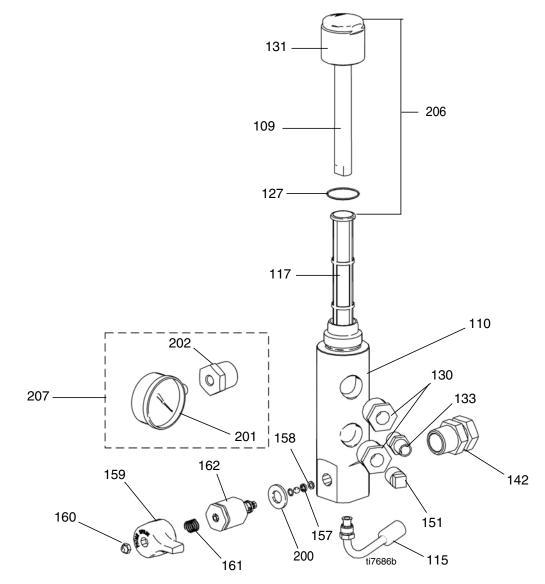

Parts List - Filter

			Qty				Qty
Ref.	Part	Description		Ref.	Part	Description	
109	15C766	TUBE, diffusion	1	160	116424	NUT, cap	1
110	15G649		1	161	114708	SPRING, compression	1
115	245440	KIT, hose, drain	1	162	245103	KIT, valve, drain, includes 157,	1
117	244067	FILTER, fluid	1			158, 159, 160, 161, 162, 200	
127	117285	PACKING, o-ring	1	200	114797	GASKET	1
130	124488	BUSHING, pipe	2	201	102814	GAUGE	1
131	15C765	CAP, filter	1	202	119969	FITTING, reducer	1
133	16F255	FITTING, nipple, rdcg	1	206	287285	KIT, cap filter, includes 109, 127,	1
142	287968	FITTING, union, adapter	1			131	
151	124489	PLUG, pipe	1	‡207	288097	KIT, gauge kit, includes 201, 202	1
157	193709	SEAT, valve	1				
158	193710	SEAL, seat, valve	1	‡ Use	on mode	els 253471 and 253472 only.	
159	15G563	HANDLE, valve	1	-		,	

Battery (Models 16U287, 16U288, 16V258, and 16V260 Only)

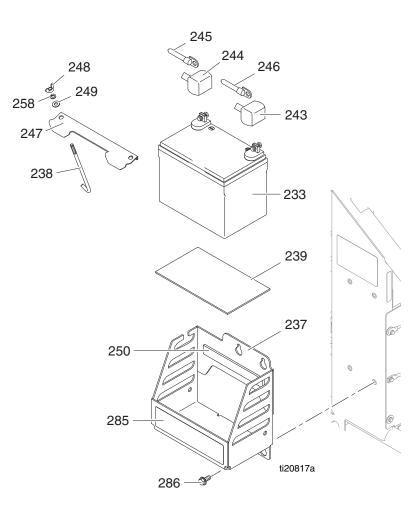

Parts List

			Qty				Qty
Ref.	Part	Description		Ref.	Part	Description	
233	115753	BATTERY, 33 AH, sealed	1	247	107069	CLAMP, battery	1
237	16U412	TRAY, battery, gh-es, painted	1	248	100011	NUT, wing	2
238	107068	HOOK, bolt	2	249	110755	WASHER, plain	2
239	801972	PAD, battery	1	250	15F366	PAD, foam	1
243	801958	PROTECTOR, terminal, red	1	258	100016	WASHER, lock	2
244	801959	TERMINAL, protector, black	1	285	16U559	LABEL, brand, es, side	1
245	113951	CABLE, electric, neg (black)	1	286	110963	SCREW, cap, flange head	12
246			1				

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call 1-800-690-2894 to identify the nearest distributor.

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

> For patent information, see www.graco.com/patents. Original instructions. *This manual contains English. MM 311484*

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2012, Graco Inc. All Graco manufacturing locations are registered to ISO 9001. www.graco.com Revised L, September 2015