

134A Chloride Ion Test Kit for Abrasives

en

Elcometer 134

**CHLOR*TEST Salt Detection Kit
For Abrasives & Concrete**

(Patent Pending)

Operating Instructions

en elcometer®

elcometer® is a registered trademark of Elcometer Limited.

CHLOR*TEST, CHLOR*EXTRACT and CHLOR*RID are all trade marks of CHLOR RID International, Inc.

All other trademarks acknowledged.

A Material Safety Data Sheet for the CHLOR*EXTRACT Solution used in the Elcometer 134 CHLOR*TEST Salt Detection Kits is available to download via our website:

www.elcometer.com/images/MSDS/ELCOMETER_134_chlor_extract.pdf.

© Elcometer Limited. England 2000 - 2012.

All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored (in a retrieval system or otherwise) or translated into any other language in any form or by means (electronic, mechanical, magnetic, optical, manual or otherwise) without the prior written permission of Elcometer Limited.

A copy of this Instruction Manual is available for download on our Website via www.elcometer.com.

*Doc.No: TMA-0231 Issue 06
Text with Cover Part No. 4898*

CONTENTS

Section	Page
1 About this test kit	2
2 Getting started.	4
3 Test procedure	5
4 Titration tubes specification	7
5 Related equipment	8

en elcometer

Thank you for your purchase of this Elcometer 134 Chlor*Test Salt Detection Kit. Welcome to Elcometer. Elcometer are world leaders in the design, manufacture and supply of inspection equipment for coatings and concrete. Our products cover all aspects of coating inspection, from development through application to post application inspection.

This Elcometer 134 Chlor*Test Salt Detection Kit is a world beating product. With the purchase of this product you now have access to the worldwide service and support network of Elcometer. For more information visit our website at www.elcometer.com

1 ABOUT THIS TEST KIT

Chloride Salts left on a surface before application of a coating can result in the coating system being forced off the surface by corrosion or blistering before the full life of the coating has been reached.

This Elcometer 134 Chlor*Test Salt Detection Kit allows recycled abrasive media to be tested for the presence of chloride salts that may contaminate the cleaned surface.

The kit contains sufficient material for 4 tests.

1.1 WHAT THE BOX CONTAINS


Each Elcometer 134 Chlor*Test Salt Detection Kit contains:

- Detection kit, x 4 (each containing: Abrasive sample container, Mixing container with a pre-measured quantity of Chlor*rid Extract Solution, Titration Tube)
- Titration Tube Snapper
- Strap

2

elcometer® en

Your Elcometer 134 Chlor*Test Salt Detection Kit is packed in a cardboard and foam package. Please ensure that this packaging is disposed of in an environmentally sensitive manner. Consult your local Environmental Authority for further guidance.

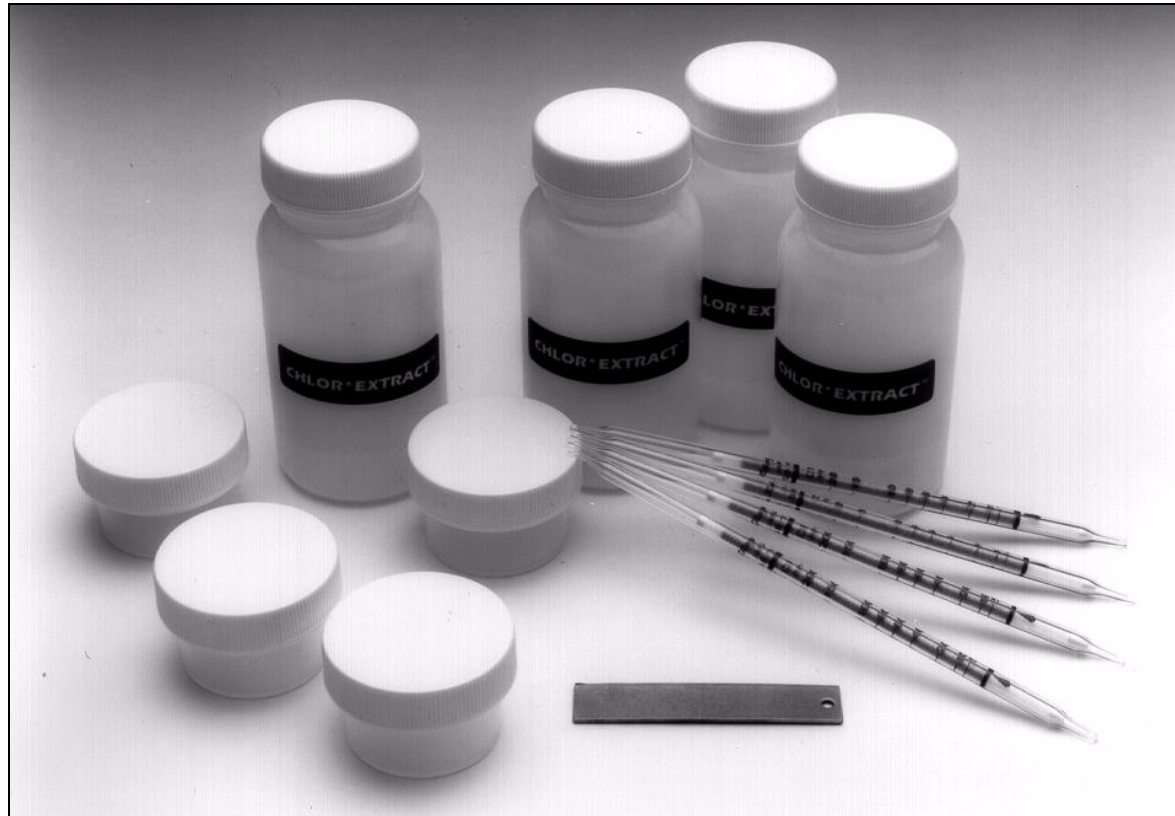

3

en elcometer

2 GETTING STARTED

Read these instructions fully before opening an Elcometer 134 CHLOR*TEST detection kit.

2.1 PRECAUTIONS

- Protect hands and eyes.
- Do not touch arrow ends of glass titration tube with fingers as salt from the skin will cause reading errors.
- Keep the titration tubes out of reach of children.
- Discard used tubes carefully according to relevant local regulations.

2.2 RESPONSIBILITY

It is the sole responsibility of the user to ensure that titration tubes are not used when they are either beyond their expiration date or have colour which is different to that referenced in “Titration tubes specification” on page 7.


The Manufacturer and/or the Manufacturer’s Distributor shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.

Manufactured by: CHLOR RID International, Inc.

Supplied by: Elcometer Ltd, www.elcometer.com

3 TEST PROCEDURE

1. Overfill the small container with a sample of the abrasive to be tested and level off using the metal tube snapper.
2. Unscrew the lid of the mixing container with the test solution and transfer the measured abrasive sample into the solution taking care not to spill any solution.
3. Replace the lid tightly and shake the mixing container vigorously for two minutes.
4. Allow the mixing container to stand for approximately ten minutes or until there is about 10 mm ($\frac{1}{2}$ inch) of clear solution above the abrasive before proceeding.
5. Using caution and avoiding touching the ends of the titration tube, snap off both ends with the metal snapper provided.

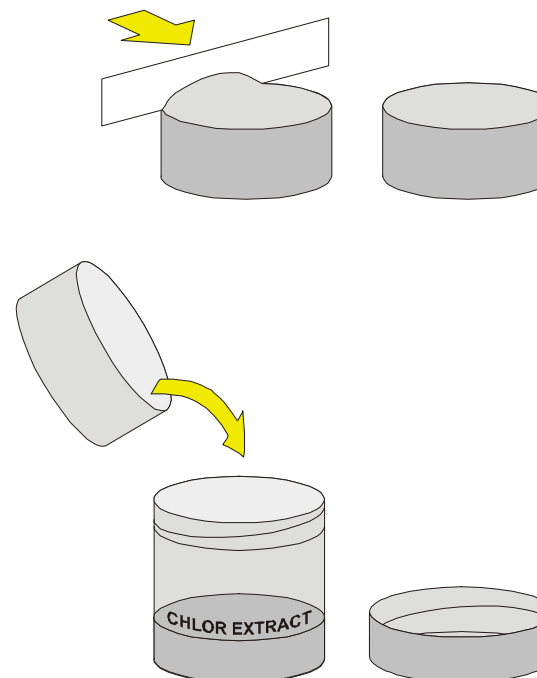

en elcometer:

6. Holding the body of the titration tube, insert the end marked with an arrow (small numbers) into the clear solution.

Care must be taken not to touch the tube against the abrasive or to allow particles of abrasive to be sucked into the tube. This will affect the accuracy of the titration tube.

Wait approximately 1½ minutes or until solution is wicked up to the top of the titration tube.


The cotton at the top of the titration tube will change colour to amber when fully saturated.



7. Immediately remove the tube and read the number on the scale at the point where the colour changes.

Pink is normal, white is the chloride level.

This scale is calibrated in parts per million (ppm).

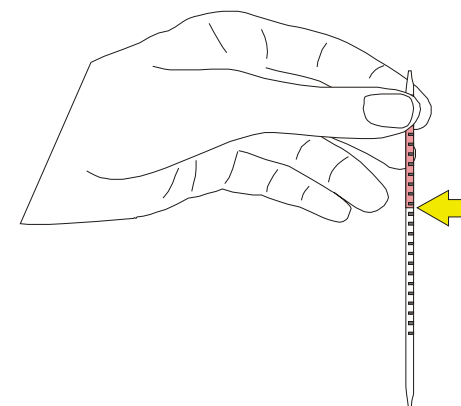

4 TITRATION TUBES SPECIFICATION

4.1 PERFORMANCE

Measuring Range:	1 ppm to 60 ppm
Sampling Time:	14 minutes
Colour Change:	Pink to White
Detectable Limit:	1 ppm
Storage Condition:	In a cool and dark place, not exceeding 25°C (77°F)

4.2 CORRECTION FOR AMBIENT CONDITIONS


No temperature correction is necessary when the sample solution temperature is between 5°C (41°F) and 80°C (176°F).

4.3 IONIC EFFECTS

Co-existence of Bromide ions, Iodide ions or Cyanide ions respectively with Chloride ions gives higher readings. Sulphide ions produce a brown stain in the indicator and their coexistence with Chloride ions produces a brown stain in the bottom of the stained layer and gives higher readings.

A test solution pH value within the range 3.5 to 11 does not affect the readings. Less than pH 3.5 or more than pH 11 gives higher readings than would be normal for the Chloride ions present in the solution.

4.4 CHEMICAL REACTION IN THE DETECTOR TUBE



en elcometer

5 RELATED EQUIPMENT

In addition to the Elcometer 134 Chlor*Test Salt Detection Kit, Elcometer produces a wide range of other coating testing equipment. Users of the Elcometer 134 Chlor*Test Salt Detection Kit may also benefit from the following Elcometer products:

- Elcometer 130 Salt Contamination Meter
- Elcometer 134S Chloride Ion Test Kit for Blast Cleaned Surfaces
- Elcometer 134W Chloride Ion Test Kit for Water/Liquids
- Elcometer 138 Bresle Kit and Patches

For further information contact Elcometer or your local supplier. Details of Elcometer offices around the world are given on the outside cover of these operating instructions. Alternatively visit the Elcometer website, www.elcometer.com



ENGLAND

Elcometer Limited
Edge Lane
Manchester M43 6BU
Tel: +44 (0)161 371 6000
Fax: +44 (0)161 371 6010
e-mail: sales@elcometer.com
www.elcometer.com

USA

Elcometer Inc
1893 Rochester Industrial Drive
Rochester Hills Michigan 48309
Tel: +1 248 650 0500
Toll Free: 800 521 0635
Fax: +1 248 650 0501
e-mail: inc@elcometer.com
www.elcometer.com

ASIA & THE FAR EAST

Elcometer (Asia) Pte Ltd
896 Dunearn Rd
Sime Darby Centre #03-09
Singapore 589472,
Tel: +65 6462 2822
Fax: +65 6462 2860
e-mail: asia@elcometer.com
www.elcometer.com

JAPAN

Elcometer KK
7F Toranomon MT40 Bldg. 5-13-1
Toranomon, Minato-ku
Tokyo 105-0001
Tel: +81 (0)3-4530-9714
Fax: +81 (0)3-4530-9713
email: jp_info@elcometer.com
www.elcometer.co.jp

BELGIUM

Elcometer SA
Rue Vallée 13
B-4681 Hermalle /s Argenteau
Tel: +32 (0)4 379 96 10
Fax: +32 (0)4 374 06 03
e-mail: be_info@elcometer.com
www.elcometer.be

FRANCE

Elcometer Sarl
97 Route de Chécy
45430 BOU
Tel: +33 (0)2 38 86 33 44
Fax: +33 (0)2 38 91 37 66
e-mail: fr_info@elcometer.com
www.elcometer.fr

GERMANY

Elcometer Instruments GmbH
Ulmer Strasse 68
D-73431 Aalen
Tel: +49(0)7361 52806 0
Fax: +49(0)7361 52806 77
e-mail: de_info@elcometer.de
www.elcometer.de

THE NETHERLANDS

Elcometer NL
Newtonlaan 115
3584 BH Utrecht
Tel: +31 (0)30 210.7005
Fax: +31 (0)30 210.6666
email: nl_info@elcometer.com
www.elcometer.com